



## INSTALLATION GUIDE

CTS Turbo MK3 TTRS/8V RS3 facelift Mid Pipes  
CTS-EXH-DP-0027



20630 Mufford Crescent, Unit #309  
Langley, British Columbia V2Y 2V9

[www.CTSTURBO.com](http://www.CTSTURBO.com)

## WHAT IS INCLUDED

1. CTS Mid pipes
2. Gaskets and bolts
3. Sleeve clamps



## TOOLS REQUIRED

1. 12mm wrench
2. 13mm wrench

## NOTES

Vehicle used in this guide is a 2018 Audi R S3. Always make sure the car is safe to work on. Do not work on the car until it has cooled down. We do not accept any liability for incorrect installation or damage during the install.


### STEP 1

Loosen the 4 clamp bolts with a 13mm wrench




### STEP 2

Carefully slide the clamps slightly towards the rear of the car

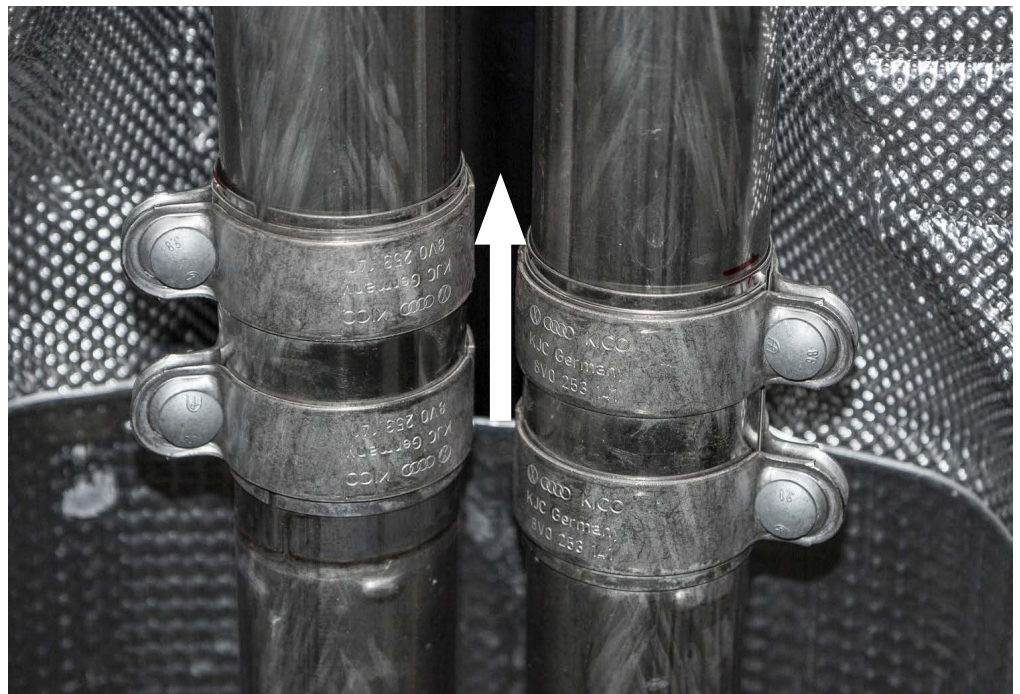

STEP 3

Loosen the 6 nuts with 12mm wrench

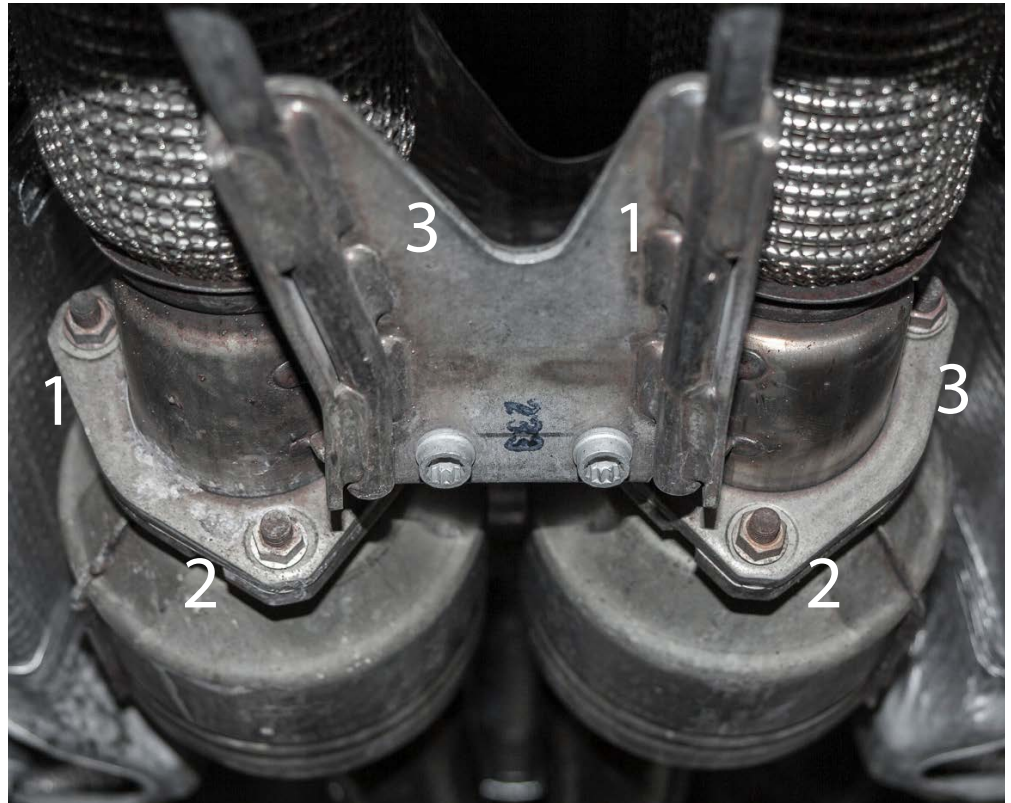

STEP 4

Remove the mid pipes




**STEP 5**

Remove and install new sleeve  
clamps

**STEP 6**

Install CTS mid pipe with new  
gasket and bolts

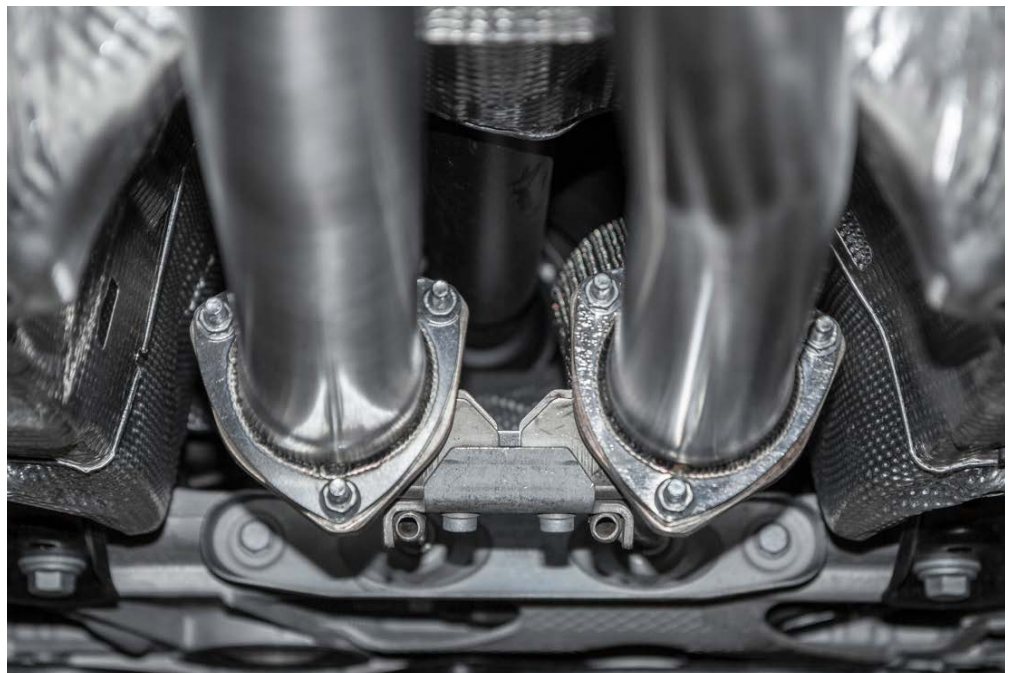

**STEP 7**

Make sure you tighten all the bolts.

You are done!

