



## **INSTALLATION GUIDE**

**CTS Turbo Dual Port Boost Tap  
CTS-HW-002**



**20630 Mufford Crescent, Unit #309  
Langley, British Columbia V2Y 2V9**

**[www.CTSTURBO.com](http://www.CTSTURBO.com)**

**WHAT IS INCLUDED**

1. CTS Dual Port Boost Tap
2. Brass Plug (only required for catch can install)

**NOTES**


Vehicle used in this guide is a 2014 VW GTI. Always make sure the car is safe to work on. Do not work on a hot motor. We do not accept any liability for incorrect installation or damage during the install.

**STEP 1**

Unclip the PCV hose from the intake manifold.

**STEP 2**

Insert the CTS Dual Port Boost tap into the intake manifold and rotate clockwise so it fits snug against the manifold.

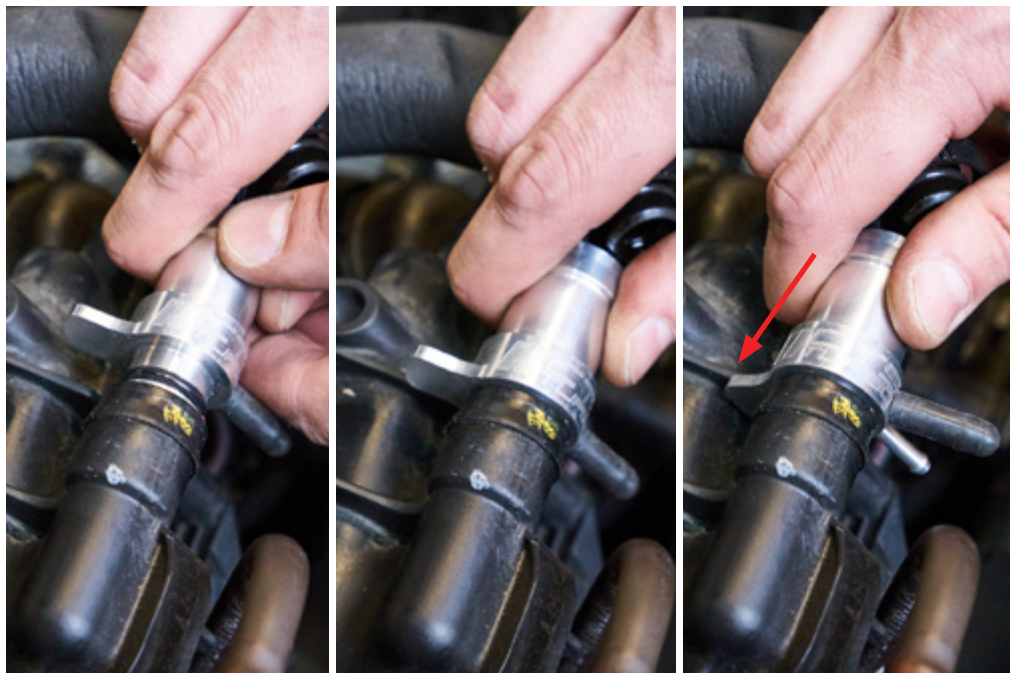

**STEP 3**

Clip the PCV pipe to the boost tap and you are done.

