



INSTALLATION GUIDE

**CTS TURBO INTAKE
B9 AUDI SQ5
CTS-IT-293R**



WHAT IS INCLUDED

1. CTS heat shield
2. CTS velocity stack air filter
3. Weather stripping
4. Silicone inlet pipe
5. Hardware



NOTES

Do not work on a hot motor. We do not accept any liability for incorrect installation or damage during the install.

STEP 1

To remove engine latch handle, use your hand or pry tool push the button in and lift handle to remove.




STEP 2

Lift and remove the slam cover.




STEP 3

Remove the two T25 screws from the intake duct.

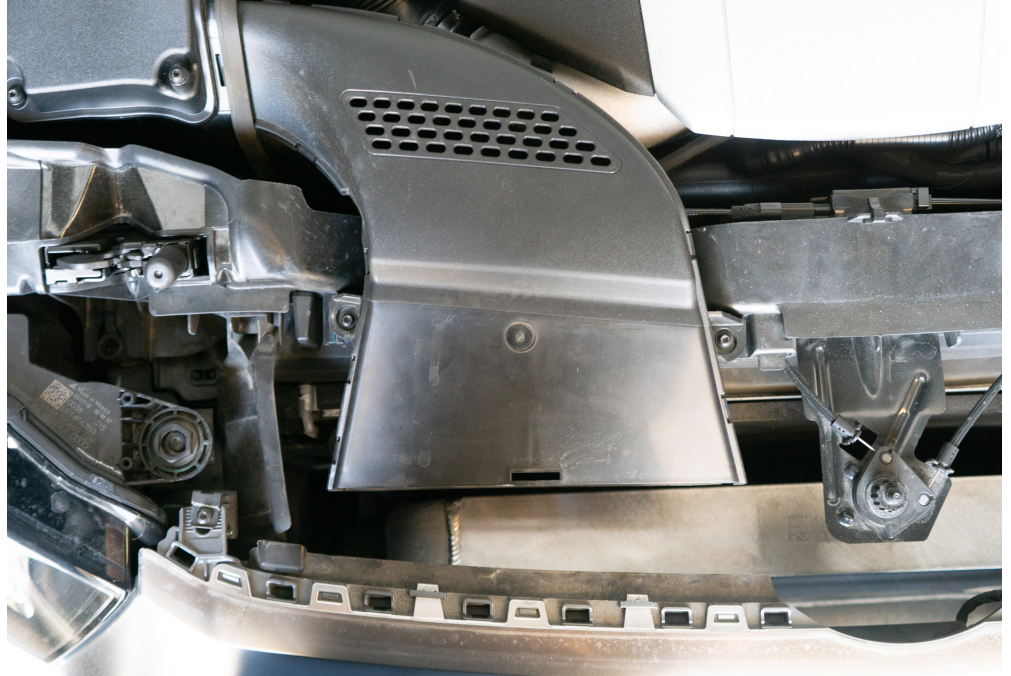**STEP 4**

Remove the stock inlet tube.

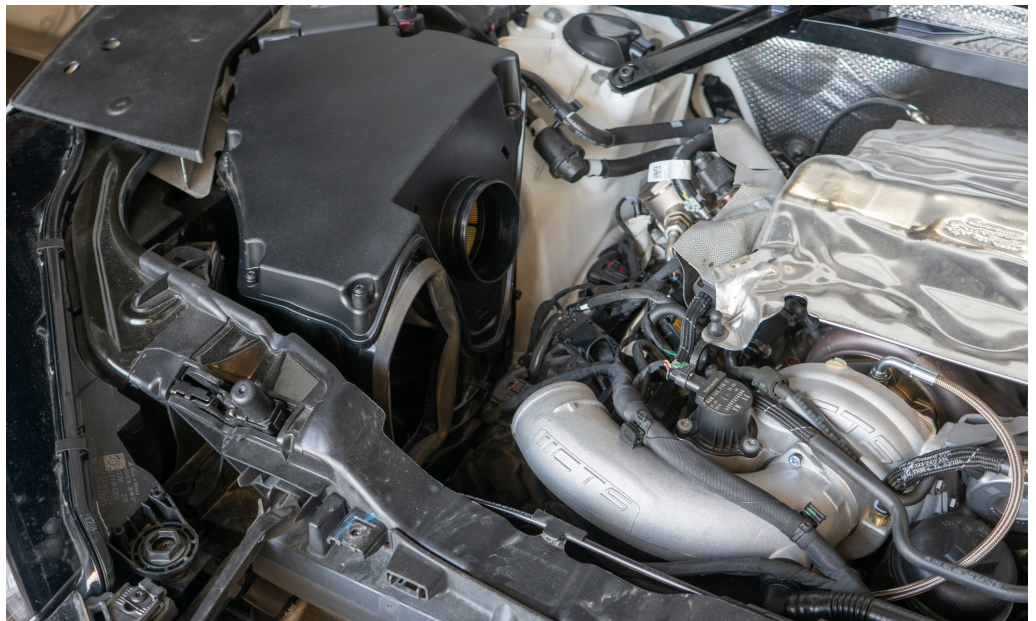

STEP 5

Lift and remove the OEM air box.



STEP 6

Assemble the heat shield and weather stripping.



STEP 7

Install the 2 provided mounting posts.

Now you can install the heat shield with the provided bolts.




STEP 8

We highly recommend wiping the inside of the air filter with isopropyl alcohol, sometimes there are left over oils from the mold release when the filters are made.



STEP 9

Install the air filter and CTS inlet silicone with the provided clamps.

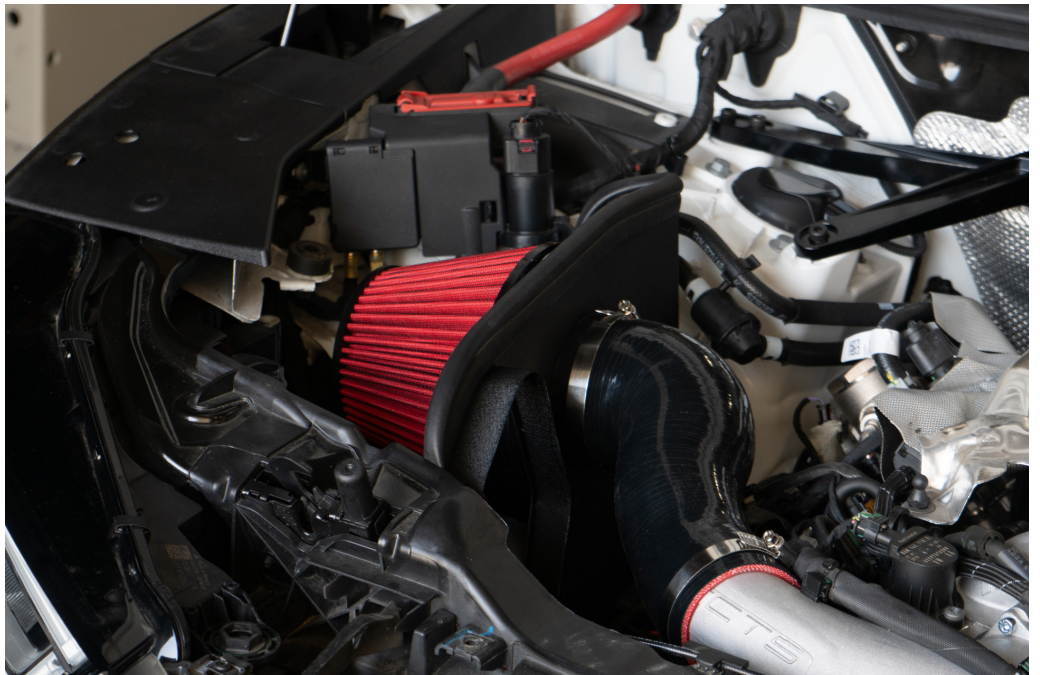

STEP 10

Reinstall back from STEP 3
and you are DONE!

