

CTS TURBO

CTS Turbo F20/F30 BMW Intercooler Installation (2014 BMW 335i shown)

NOTE: These steps are similar on many different models. Please see our website for complete listing. We do not accept any liability for incorrect installation or damage during the install.


Have the following tools at hand:

- T25 torx
- 8mm socket
- Screwdrivers and needle nose pliers

Make sure the car is cooled off before starting the install. Never work on a hot motor.

Step 1: Safely lift and support the vehicle. Remove all 8mm screws holding the bellypan on. Remove the bellypan.

Step 2: Remove 2x T25 torx screws holding the factory intercooler (you will reuse these). Unclip the charge pipes and two retaining clips on the bottom of factory intercooler. Remove the long plastic air deflector by carefully pulling down.


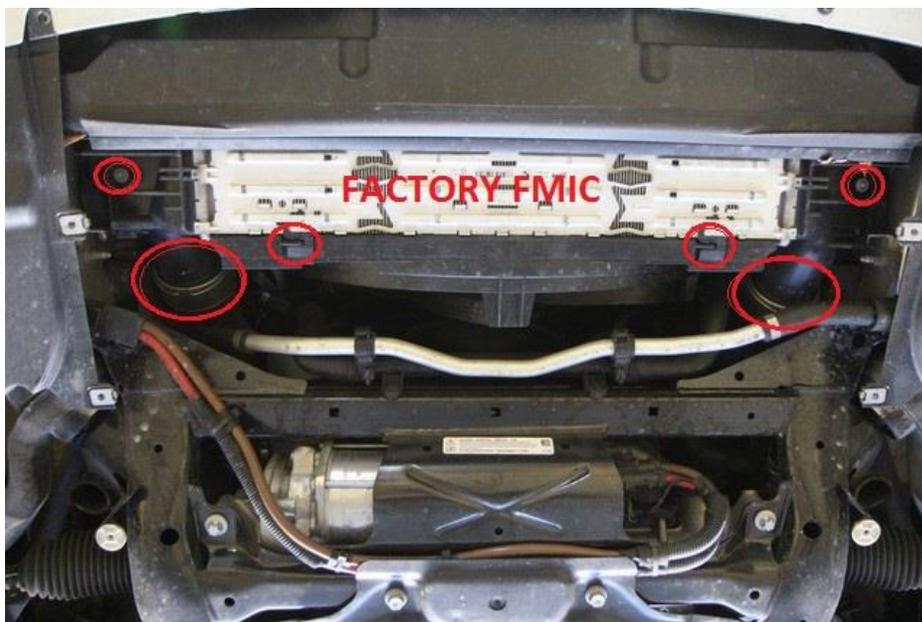




Step 3: Push the plastic cover down and lower the factory intercooler (will not be reused). Pull down carefully. Remove charge pipes and take out the factory intercooler.



Step 4: Following the same procedure, reinstall CTS Turbo intercooler. Make sure the intercooler tabs line up with plastic guides. Secure intercooler using factory T25 torx screws.

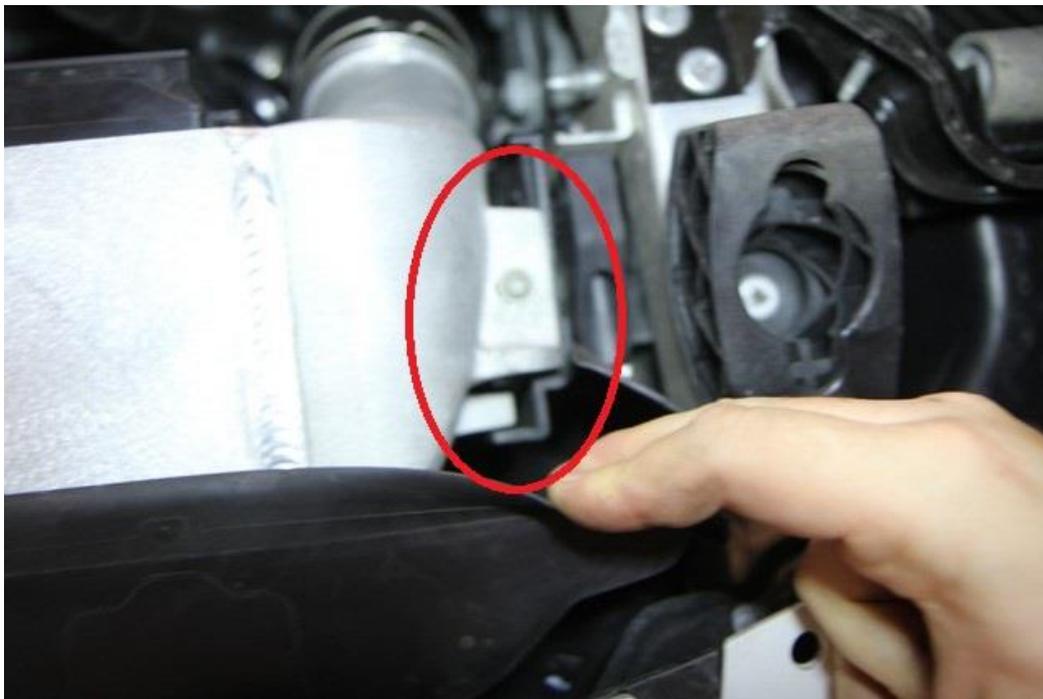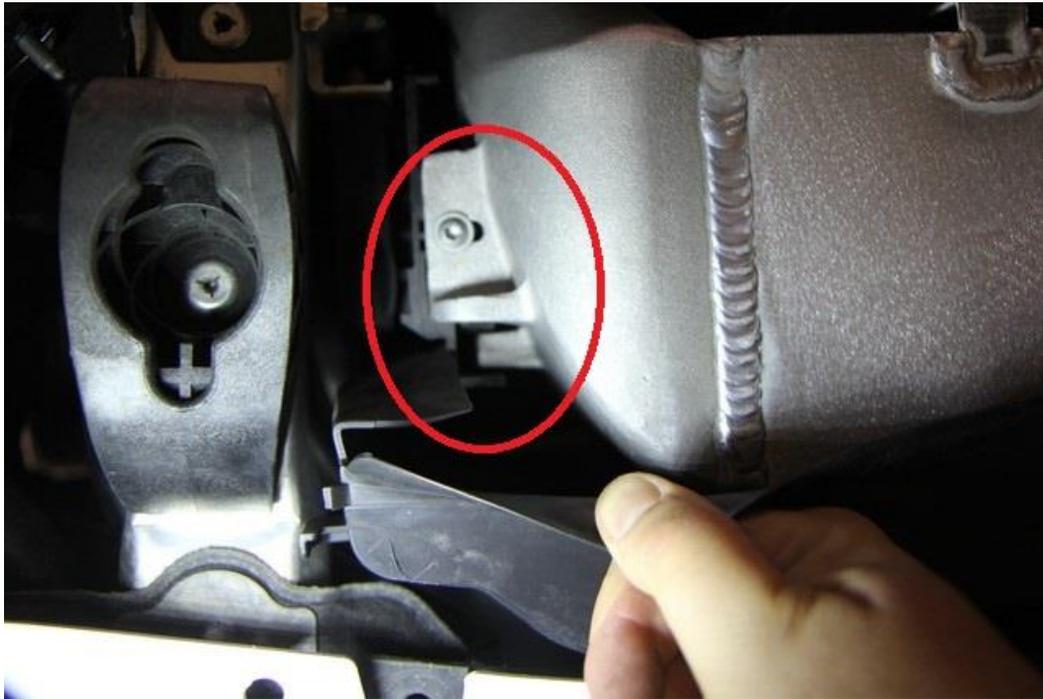

Step 5: Clip in charge pipes and reinstall bellypan. Test drive vehicle.

You are done!